

arkhalumen




apt

APT Programmer
Programming Guide - Engineering
APT-CC-VC-LN
& APT-CC-VD-LN

Table of Contents

Connecting the APT Programmer.....	1
Using the APT Programmer.....	1
Using the Programmer Interface Window.....	2
Basic Tab.....	3
Advanced Tab.....	4
CCT Range Tab.....	5
CCT Mapping Tab.....	6
Generating Labels.....	8
Generating a Report.....	9

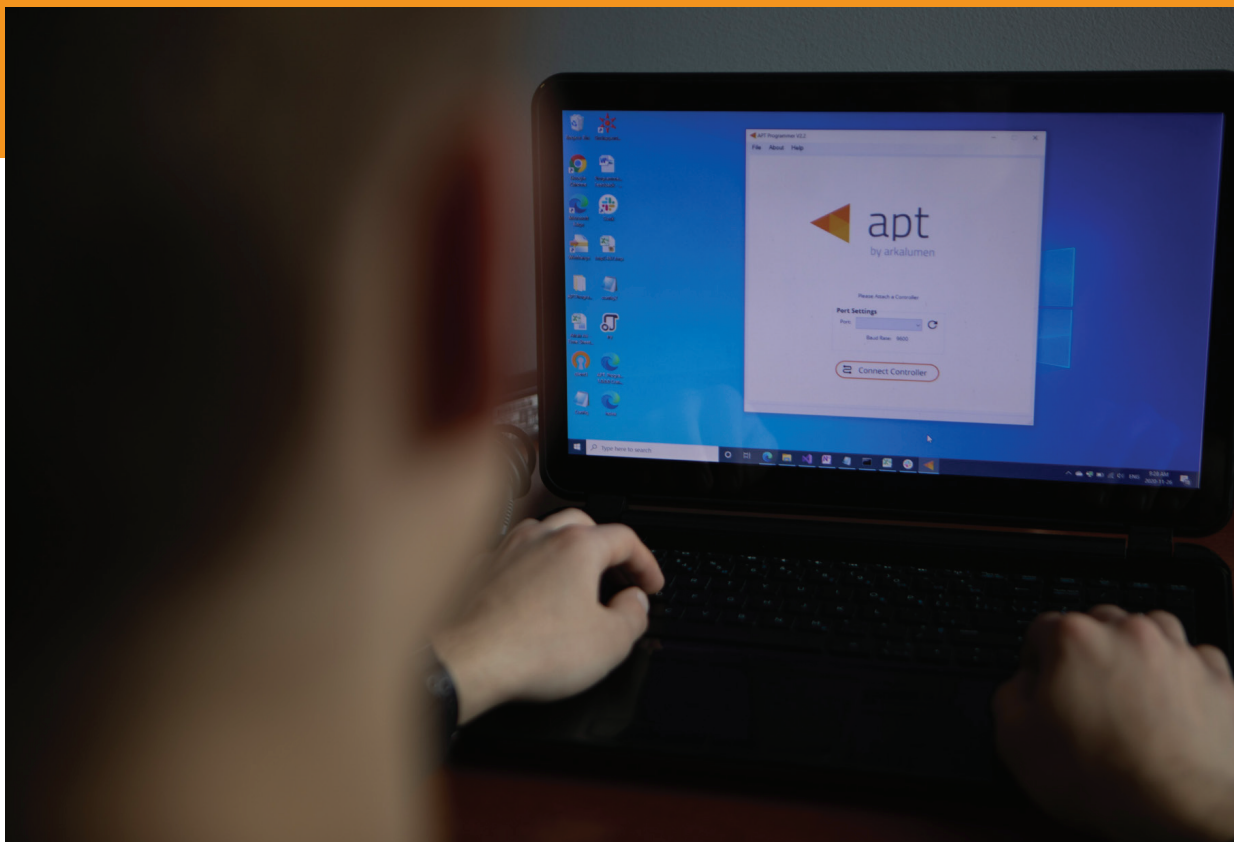

Connecting the APT Programmer

- 1 Connect the APT Programmer to the PC and controller as shown in Figure 1.

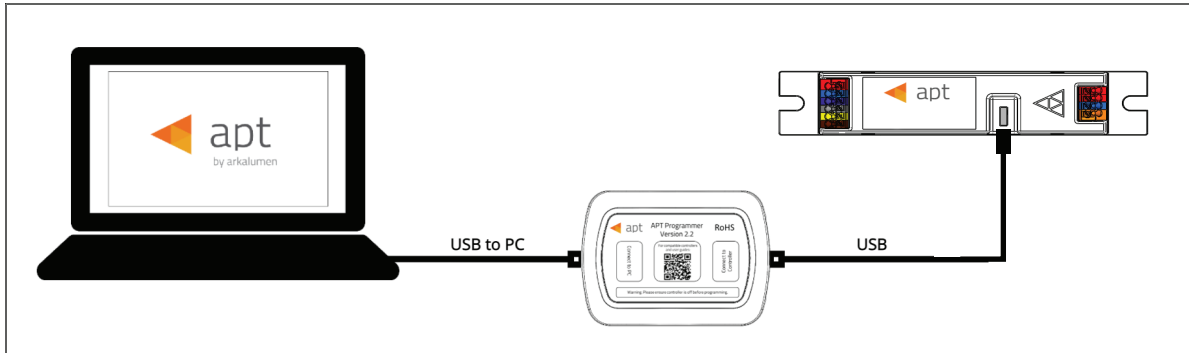



Figure 1: Wiring Diagram

Using the APT Programmer

Installing the APT Programmer Interface

- 1 Click on the provided link to download the **APT Programmer Interface** folder.
- 2 Open the folder **APT Programmer Interface** on a Windows-based PC, and select the file **setup.exe**
- 3 Launch **setup.exe** to install the APT Programmer Interface. The APT Programmer Interface shortcut will be added to the Start Menu.

Running the APT Programmer Interface

- 1 Launch the APT Programmer Interface software by selecting the application, **APT Programmer Interface**, from the Start Menu. The Programmer Connect window (shown in Figure 2) will open.
- 2 Select the COM port to which the APT Programmer is connected from the **Port** drop-down menu. If a COM port is not visible, click the  button until the correct port is visible.
- 3 Click **Connect Controller** to establish a connection. Once connected, the APT Programmer Interface window (shown in Figure 3) will open.

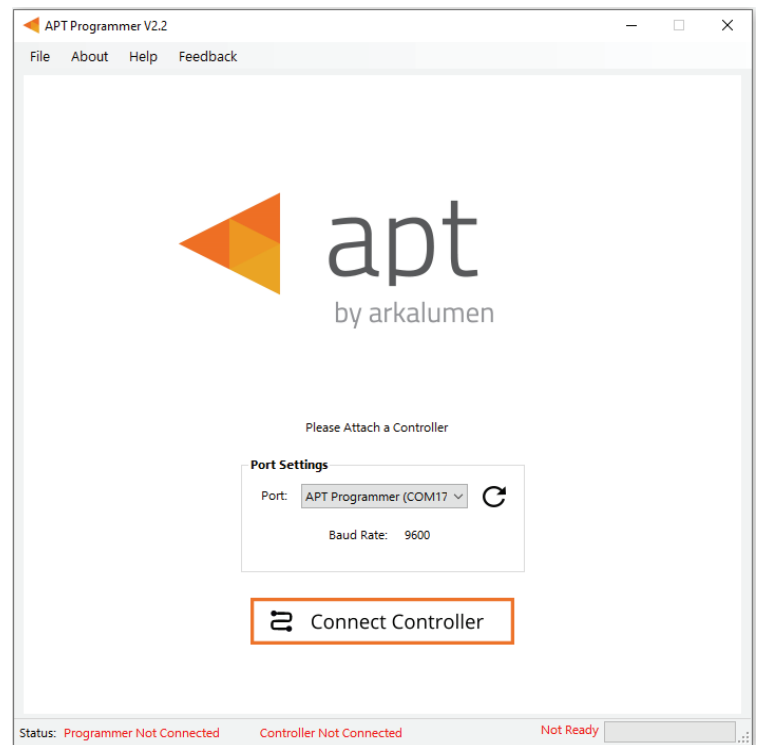


Figure 2: Programmer Connect window

Note: Once connected, if the APT Programmer is not displayed in the port list, please run the CDM212364_Setup file sent with the APT Programmer software to install the drivers.

Using the Programmer Interface Window

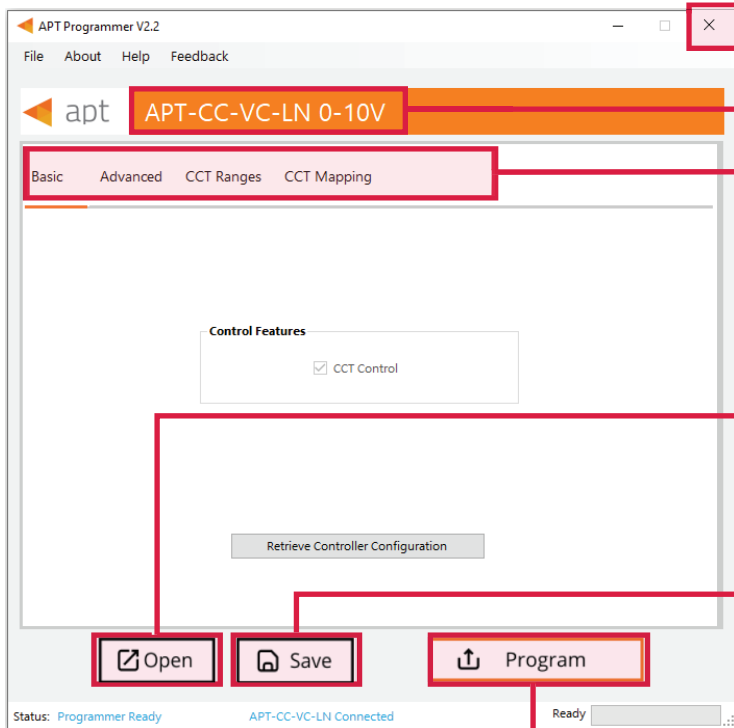


Figure 3: Programmer Interface window

Exit the APT Programmer Interface by either clicking **x**, pressing **Ctrl+Q** or selecting **File > Exit**. This will open a window with the option to save the current configuration.

*Note: Clicking **No** will discard all unsaved configurations.*

Displays the connected APT Controller.

Navigate through settings quickly by clicking on the tabs.

Open a previously saved configuration file (.ARKENC) by either clicking **Open**, pressing **Ctrl+O** or selecting **File > Open** from the menu.

Save the current configuration by either clicking **Save**, pressing **Ctrl+S** or selecting **File > Save** as from the menu. A .txt file is created with a readable summary of the saved configurations and a .ARKENC file which is used to upload the saved configurations to the APT Programmer User Interface or to APT the Production Programmer.

When satisfied with the configuration, click **Program** to program the controller.

The progress bar displays the status of the current task.



Displays **Programmer Ready** if the APT Programmer Interface has successfully connected to the APT Programmer. If no connection has been established, it will read **Programmer Not Connected**.


Displays the currently connected APT Controller and its hardware version. If no connected APT controller is found, it will read **Controller Not Connected**.

The Ready field in the Status Bar displays:

- Ready
- Not Ready
- Successfully Programmed
- Retrieve Successful
- Wrong Controller Connected
- No Controller Identified

Figure 4: Programmer Interface window - Status Bar at bottom of window of Fig 3

Basic Tab

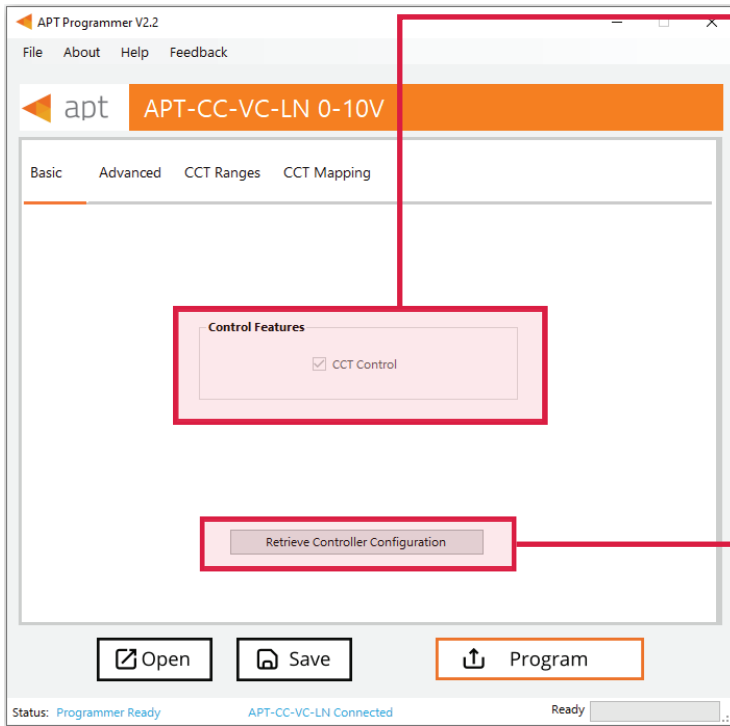


APT-CC-VC/VD by default enables calibrated correlated color temperature (CCT) control (warm or cool light).

Click **Retrieve Controller Configuration** to view the currently programmed configurations of the connected controller.

A separate window will open with the controller's configuration (shown in Figure 6).

Figure 5: Programmer Interface window - Basic tab

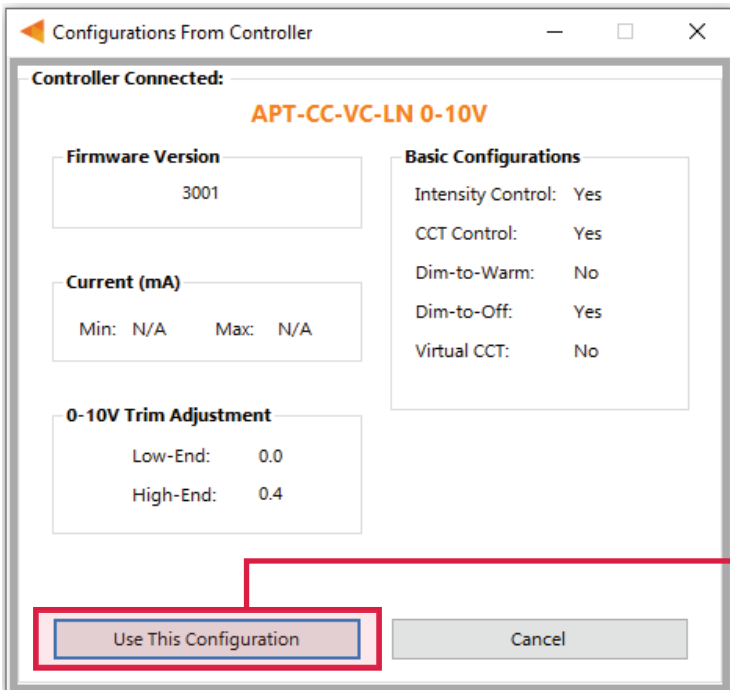

Click **Use This Configurations** to import the controller's current configuration into the APT Programmer Interface. Note: All APT Programmer Interface settings will be changed to the controller's current configuration.

Figure 6: Configurations from Controller window

Advanced Tab

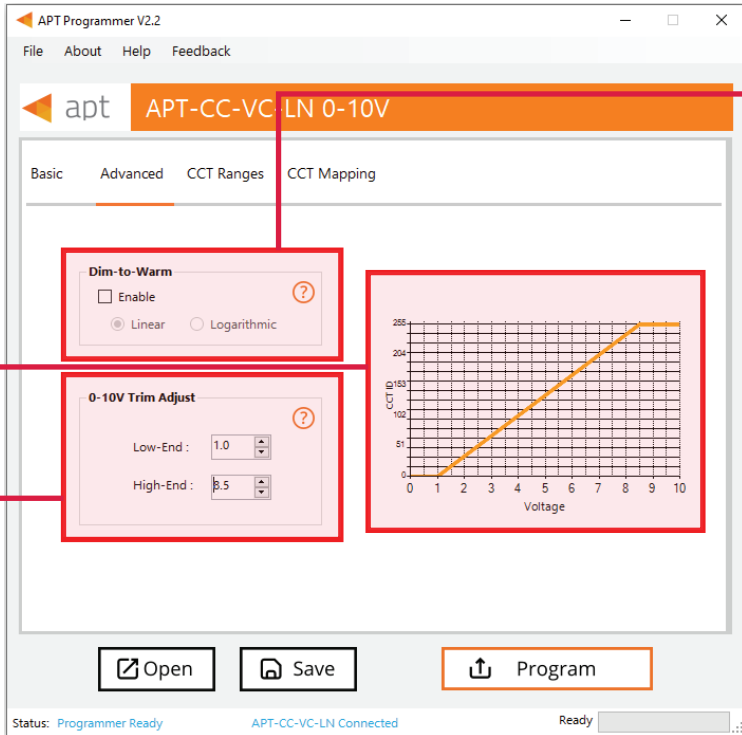


Figure 7: Programmer Interface window - Advanced tab

0-10V Trim Adjust

Enter **Low-End** and **High-End** 0-10V trim values to designate ranges of input voltages to the minimum and maximum CCT and intensity outputs.

Dim% vs Voltage graph from 0-10V Trim Adjust.


Note: In Figure 7, CH1 and CH2 will output minimum CCT for inputs 0 to 1.0V and maximum CCT for inputs of 8.5 to 10V.

Enabling Dim-to-Warm

- 1 Click the box to enable **Dim-to-Warm**. When dimming LEDs, the calibrated correlated color temperature (CCT) does not change. The Dim-to-Warm feature imitates the effect of halogen lamps, which get warmer when dimmed. Note: Use of a 2 channel LED module with a warm CCT channel is required.
- 2 Select either Linear or Logarithmic transition between cool and warm light.

*Note: When enabling **Dim-to-Warm**, 0-10V Trim Adjust and its graph get disabled.*

CCT Ranges Tab

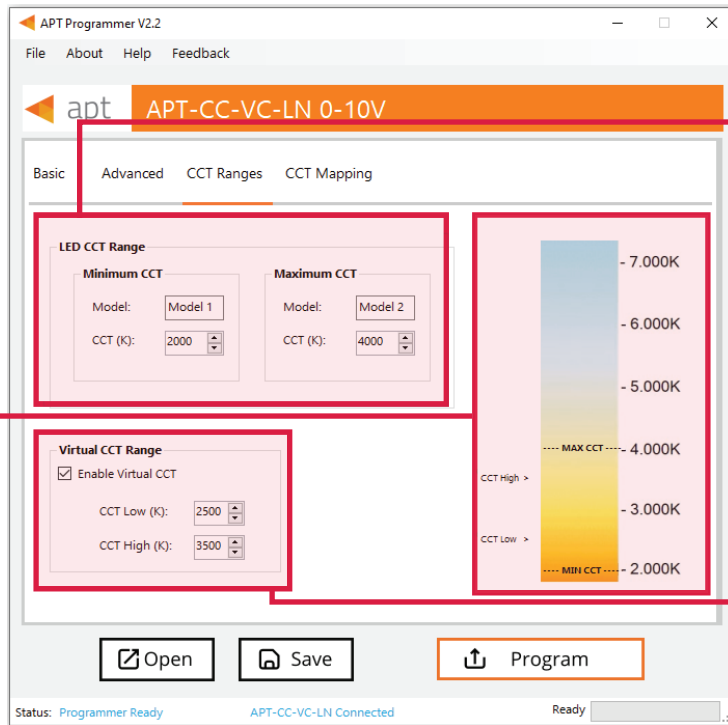

Setting a virtual (custom) CCT range

- 1 Enter the **LED CCT Range** using the **Minimum CCT** and **Maximum CCT** values supported by the connected LED module.
Note: The current settings will be shown as MIN CCT and MAX CCT in the right-hand column.
- 2 Enter the LED **Model** numbers associated with the minimum and maximum CCT to add further information for the generated report.
- 3 Click the box to enable **Virtual CCT**.
- 4 Enter **CCT low** and **CCT high** values.
*Note: **CCT low** must be greater than or equal to **Minimum CCT**, while **CCT high** must be less than or equal to **Maximum CCT**.*

Figure 8: Programmer Interface window - Virtual CCT tab

The selection will be shown as **CCT Low** and **CCT High** in the column on the right-hand side of the Programmer Interface window.

*Note: If enabled, the **Virtual CCT Range** takes precedence over the **LED CCT Range**.*

CCT Mapping Tab

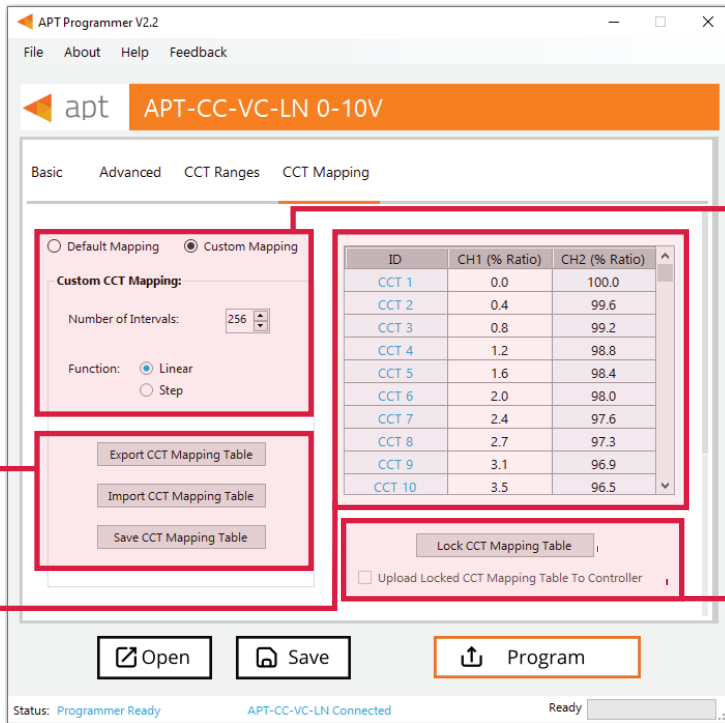


Figure 9: Programmer Interface window - CCT Mapping tab

Displayed in the table, each CCT value is mapped to a mix ratio of LED channels (**CH1**) and (**CH2**), while each channel has a CCT ratio ranging from minimum (0%) to maximum (100%). Default Mapping evenly spreads out 256 values along a linear curve.

*Note: Each CCT value's corresponding **CH1/CH2** on-time percentages will always sum to 100%.*

Enable **Export**, **Import**, or **Save** of the CCT Mapping Table by selecting button. Detailed steps on page 7.

Uploading CCT Custom Mapping

- 1 Click the **Custom Mapping** button in the **CCT Mapping** tab.
- 2 Enter the number of CCT intervals, ranging from 2 to 256.
- 3 Select either **Linear** or **Step function**. Linear will create a CCT mapping with linear transitions between each interval point. Step will create a CCT mapping with step transitions between each interval point.
- 4 Click the **CH1** column in the table to enter a custom CCT percentage ratio, the corresponding **CH2** value will automatically abate.

*Note: Reselecting **Default Mapping** will open a window with the option to save the current custom mappings.*

Click **Lock CCT Mapping Table** to prevent changes from being made to the mapping table, this will also update the graph (shown in Figure 10).

Click the **Upload Locked CCT Mapping To Controller** box to upload the mapping table when clicking **Program**.

Click **Unlock CCT Mapping Table**, when the mapping table is locked, to make changes to the table.

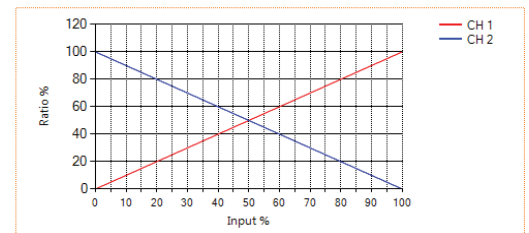


Figure 10: CCT mapping graph

Using Excel to Customize the CCT mapping table

- 1 Click **Export Mapping Table** to generate a spreadsheet containing the mapping table that is currently open.
- 2 Modify the mapping table directly in the spreadsheet, make sure all editable cells contain a value.
- 3 Save the spreadsheet (.xlsx).

Saving the CCT mapping table

- 1 Click **Save Mapping Table** to save the current mapping table.
- 2 Find a save location for the generated spreadsheet file (.xlsx) containing the mapping table that is currently open.
- 3 Name and save the file to the desired location.

Importing a previously saved CCT mapping table

- 1 Click **Import Mapping Table** to open a previously saved mapping table in the APT Programmer Interface.
- 2 Select a previously saved mapping table spreadsheet file (.xlsx) in the file browser.
- 3 Click **Open**, in the file browser, to import the file. If the spreadsheet is formatted correctly, it will be successfully imported otherwise an error message will be displayed and the file will not be imported.

Tip: scroll to the bottom of the window to see graphs (shown in Figure 10) of the current mapping configuration.

Generating Labels

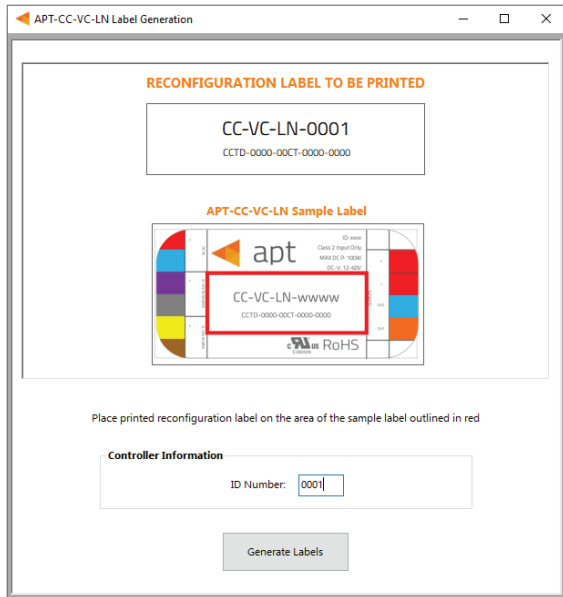


Figure 11: Label Generation window

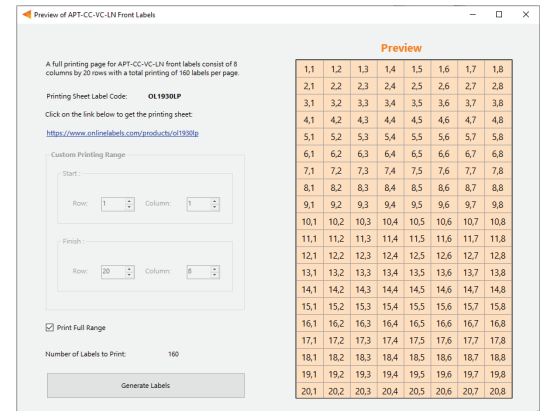


Figure 12: Label generation print preview window

- 1 Select **File > Generate Label** or press **Ctrl +L** to open the Label Generation window.
- 2 Input the 4-digit **ID Number** written on the original label (shown in Figure 17). The ID Number indicates the production build of the APT Controller.
- 3 Click **Generate Labels**.
- 4 Input the starting and finishing rows and columns that will fit on the labels. The selected range is highlighted in blue (Figure 12).
- 5 Select **Print Full Range** to print the whole page.
- 6 Click **Generate Labels**, the default web browser will open and display a preview of the print.

*Note: Arkalumen recommends using Google Chrome and setting margins to **None** in the printing options.*



To obtain blank labels, contact Arkalumen or visit onlinelabels.com
 Labels: <https://www.onlinelabels.com/products/ol1930lp>
 When ordering, Arkalumen recommends selecting Weatherproof Polyester labels in a material suited for your printer.

Generating a Report

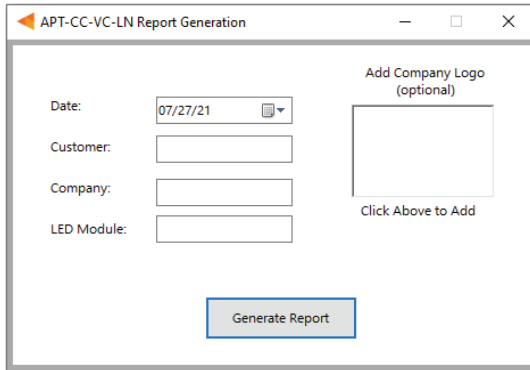


Figure 13: Report Generation window

- 1 Select **File > Generate Report**, or press **Ctrl+R**, to open the Report Generation Window (shown in Figure 13).
- 2 Enter the **Date, Customer, Company, and Light Engine** part number to customize the report.
- 3 Click on the white box under **Add Company Logo** to include a logo in the report (*optional*).
- 4 Select the desired logo (.jpg) in the file browser and click **Open** (*optional*).
- 5 Click **Generate Report**, the default web browser will open and display a preview of the print (shown in Figure 14).

Note : Arkalumen recommends using Google Chrome, and setting margins to **None** in the printing options.

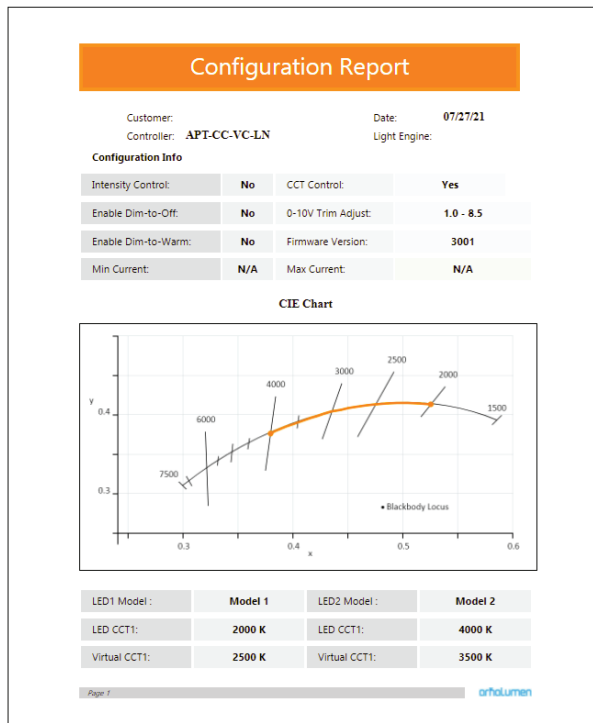


Figure 14: Parts of an Example report



If at any time you have comments or suggestions regarding the APT Programmer or APT Controller, please click on the **Feedback** tab in the top menu bar to submit information to our team. We appreciate all feedback and are committed to continuously improving our products. For immediate support, please contact the Arkalumen team at 1-877-856-5533 or email support@arkalumen.com

Arkalumen designs and manufactures intelligent LED controllers and custom LED modules for light fixture manufacturers in order to enable energy efficient and feature rich lighting solutions. For over 10 years, **Arkalumen** has focused on simple, flexible, cost effective solutions that allow highly differentiated fixtures to be launched in commercial, industrial, and residential markets. With 30+ patents, we have a history of driving innovation within the lighting industry and are proud to push the limits of what lighting in applications in education, healthcare, film and horticulture can be.

Proudly engineered and assembled in North America.

Visit [Arkalumen.com](https://www.arkalumen.com) to see our full product portfolio



For any further support please contact Arkalumen
support@arkalumen.com
toll free at 1.877.865.5533

arkalumen

[Arkalumen.com](https://www.arkalumen.com)

Rev: 2 Edited: August 17th, 2022